



INDUCTION COOKER



USER MANUAL

INDUCTION COOKER

ED45/4007054

V2 08/24

DISTRIBUTED BY:



www.southernhospitality.co.nz



www.rewardhospitality.com.au

Specification

1. Item code: ED45/4007054
2. Power: 2000W
3. Voltage: 220–240V, 50/60Hz
4. Temperature: 60–240°C

Cautions

1. Do not plug the unit in with wet hands.
2. Do not plug the unit into a socket where several other appliances are plugged in.
3. Do not use if the plug is damaged or the power plug does not fit the socket safely.
4. Do not modify the parts, or repair the unit by yourself.
5. Do not use the unit near flame or wet places.
6. Do not use where children can easily touch the unit or allow children to operate the unit by themselves.
7. Do not place the unit on unstable surfaces.
8. Do not move the unit when the pot or pan is on it.
9. Do not heat the pot empty or overheat the pot.
10. Do not place metallic objects such as knives, forks, spoons, lids, cans and aluminium foil on the top plate.
11. Use the unit with sufficient space around it. Keep the front side and either the right or left side of the unit clear.
12. Do not use the unit on carpet or a tablecloth (vinyl) or any other low-heat resistant material.
13. Do not place a sheet of paper between the pot/pan and the unit. The paper may burn.
14. If the surface cracks, switch off and take the unit to a service centre immediately.
15. Do not block the air intake or exhaust vent.
16. Do not touch the top plate right after removing the pot or pan as the top plate will still be very hot.
17. Do not place the unit near objects which are affected by magnets, such as: radios, televisions and automatic bank cards.
18. The power cord must be replaced by qualified technicians.
19.  Caution, hot surface.
20. For safety reasons (children) various buttons do not respond when they are touched lightly. Press the keys on the entire surface with your finger.
21. This appliance can be used by children over the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction on how to use the unit in a safe way and they understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be done by children unless they are older than 8 and supervised. Keep the unit and its cord out of reach of children less than 8 years old.
22. The appliance is not intended to be operated by using an external timer or separate remote control system.
23. After use, switch the hob element off by switching off the control. Do not rely on the pan detector.
24. Appliance not to be cleaned with high pressure water.
25. Any repairs should only be carried out by trained technicians or recommended by the manufacturer.

23.  This product contains recyclable materials. Do not dispose of this product in your normal rubbish collection. Please contact your local council for the nearest collection point. Environmentally friendly disposal of the unit to protect the environment.
Dispose of packaging in an environmentally friendly manner. This appliance is labelled in accordance with European Directive 2012/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment—WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

How to use

1. Place suitable cookware in the centre of the top plate and plug it into the socket.
NOTE: Do not leave your pan on the appliance while empty as this may damage your pan.
2. Switch the appliance on by pressing the ON/OFF key .
3. If your pan is suitable for induction and has a minimum bottom diameter of 12cm the appliance will start.
4. If you press the function key and select the power mode  the light will go on and the appliance will go into heating mode. The display will show the default power setting “1200”. You can adjust the power by pressing the “+” or “-”.
5. If you press the function key and select temperature mode  the light will go on and the appliance will go into temperature mode, the default temperature is 200°C. You can set the temperature between 60–240°C in 20°C increments by pressing the “+” or “-”.
NOTE: If the arrow keys keep getting pushed, the SET temperature increases quickly.
CAUTION: The programmed temperature is that of the glass plate and not the temperature in the pot/pan.
6. If the unit beeps after being switched on, the pot/pan you are using is not suitable for induction or the appliance is defective. If unsure, always contact the supplier.
7. After programming the power or temperature, you can choose to program the timer. Press the function button and select timer mode . You can set the desired time by pressing the “+” or “-”. The maximum programmable time is 180 minutes.

NOTE: Allow the appliance to cool off before you touch it. The glass plate is very hot after use.

Suitable cookware to use

1. Correct Pans/pots: steel or cast iron, enamelled iron, stainless steel, flat bottom pans/pots with diameter from 12 to 22cm.

NOTE: Please use the recommended type and size of cookware specified in manual. (A pot/pan with a diameter of 20cm is most suitable for this induction cooker cooking zone).



Enamelled Iron Pot Iron or Enamelled Iron Pot Castiron Pan Iron Pot Deep-Fry Pan Stainless Steel Pot Iron late

2. Incorrect Pans/pots: heat-resistant glass, ceramic cookware, copper, aluminium pans/pots. Rounded bottom pans/pots with base measuring less than 12cm.

NOTE: Cookware that has welded stainless steel in the base of the aluminium alloy body can not reach the rated output power.



Rounded Bottom Pot Aluminum Copper Pot Bottom Measuring Less than 12cm Pot with Stands Ceramic Pot Heat-Resistant Glass Pot

3. If the induction cooker has been used with cooking oil to fry food, remove the very hot pot/pan of oil to prevent it damaging the induction cooker.
4. After use, press the power on/off switch to turn off the unit. It is normal for the cooling fan to keep operating until the detected internal temperature is lower than 80°C.

How to clean

1. Unplug the unit and wait until it has cooled down completely. Clean after every use.
2. If the pot/pan is not cleaned before use, discolouration or cooking stains may happen.
3. Do not use benzine, thinner, a scrubbing brush or polishing powder to clean the induction cooker.
4. Wipe down the induction surface with dishwashing liquid and a damp cloth.
5. Use a vacuum cleaner to suck up dirt from the intake and exhaust vent.
6. Never run water over the unit (if water gets inside it may cause a malfunction).
7. The instructions in this manual state that the surfaces will get hot during use.
8. Metallic objects such as knives, forks, spoons and lids are not to be placed on the hot plate as they can get very hot.
9. If the power cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified technician in order to avoid a hazard.