

## INDUCTION COOKER



# USER MANUAL

## INDUCTION COOKER

ED136/4007065

V1 08/24

DISTRIBUTED BY:



[www.southernhospitality.co.nz](http://www.southernhospitality.co.nz)

Reward  
Hospitality

[www.rewardhospitality.com.au](http://www.rewardhospitality.com.au)

## I .Specification

- 1). Item No.: ED136/4007065
- 2). Power Rate: 300W - 3500W
- 3). Voltage: 230V ~ 50Hz
- 4). Temperature: 60°C-240°C

## II . Importance

**Please read carefully the following instructions before using the induction cooker.**

- 1). Do not plug with wet hands in order to avoid getting electric shock.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the power cord is damaged or the plug does not fit the socket safely.
- 4). Do not open the cooker to replace spare parts by yourself.
- 5). Do not use the cooker closed to flame or wet places.
- 6). Do not use where children can easily touch the cooker, or allow children to use the cooker by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the cooker together with a pot.
- 9). Do not heat a pot empty or overheat to avoid dry boiling.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the cooker close to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards or cassette tapes.
- 18). The power cord must be replaced by qualified technicians.



- 19). The surface is liable to get hot during use.
- 20). This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**Warning: Children should be supervised to ensure that they do not play with the appliance.**

## III .How to Use

- 1). Please put suitable cookware onto the plate of induction cooker, and connect the plug to suitable socket. After connected, pressing the ON/OFF button, the light will shine, indicating that the power is connected normally.
- 2). Pressing the Function button, the heating light is on, indicating that the induction cooker enters the heating state; the default power of heating is 3100W. Adjust the power rate from level 300-3500W by press "+" or "-"

Power level:(300W/700W/1000W/1400W/1700W/2100W/2500W/2800W/3100W/3500W)

3). Pressing Function button again, the light of temp will shine, indicating the induction cooker is entering the state of temperature, the default temperature is 200°C, Adjust the temperature from 60°C to 240°C by press "+" or "-" Temperature level:(60°C/80°C/100°C/120°C/140°C/160°C/180°C/200°C/220°C/240°C)

4). Adjust the time from 0 minute to 180 minutes by press "+" or "-" at the state of Time.

5). When pressing On/Off during the working state, the induction cooker will stop working immediately. After stopping working, the fan will cool down the induction cooker for one minute, and then will be off.

6). The induction cooker will shut off automatically if there is no any operation within 2 hours if Timer is not set above 120 minutes.

 
7). The temperature of accessible surfaces may be high when the appliance is operating

**Warning: The appliance is equipped with an overheat protection. If the pot or pan is getting too hot, the appliance will switch off power, a buzzer sounds and on the display occurs "E2". Should this happen, wait for some minutes and cool the appliance down. After that, the appliance works without problems.**

#### IV. Usable and Non-usable Utensils


##### 1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



##### 2). Non-usable Pans

 Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



#### V. How to Clean

1). Unplug and wait until the cooker is cooled down completely. Clean the cooker after using each time.

2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.

3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.

4). Wipe using dish washing agent and damp cloth.

5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.

6). Never run water over the unit (Water gets inside may cause malfunction).

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.